


maestro.

INSTRUKCJA OBSŁUGI

odkurzacz do popiołu



Model: MAC175-1200W-18L
230V | 50Hz | 18L | 1200W



Zachowaj instrukcję, aby mieć do niej stały dostęp.

Przed uruchomieniem urządzenia należy dokładnie przeczytać niniejszą instrukcję. Nieprzestrzeganie jej może spowodować obrażenia ciała a także spowodować ryzyko pożaru lub porażenia prądem. Przed pierwszym użyciem należy upewnić się, że wszystkie części lub akcesoria używane z tym urządzeniem są prawidłowo i bezpiecznie zamontowane.

UWAGA

Dzieci, młodzież i osoby niepełnosprawne ruchowo nie mogą obsługiwać urządzenia.

Urządzenie jest zgodne z przepisami bezpieczeństwa wymaganymi dla sprzętu elektrycznego. Przeczytaj instrukcję obsługi przed uruchomieniem sprzętu.


Niewłaściwe użytkowanie może prowadzić do obrażeń ciała i uszkodzenia mienia. Użytkownicy którzy nie zapoznali się z instrukcją, nie mogą obsługiwać urządzenia.

Informacje dotyczące bezpieczeństwa

- Nie pozostawiaj działającego odkurzacza bez nadzoru.
- Napięcie sieciowe musi być takie samo, jak podane na tabliczce znamionowej odkurzacza.
- Nie przenoś urządzenia za przewód.
- Wyjmuj przewód zasilający z gniazdka tylko przez wyciągnięcie wtyczki nie ciągnij za przewód. Chronь przewód przed olejem, wysoką temperaturą i ostrymi krawędziami. Uszkodzony przewód może spowodować porażenie prądem.
- Upewnij się, że przewód nie jest uszkodzony poprzez najechanie, zgniecenie, rozdarcie itp.
- Jeśli przewód zasilający jest uszkodzony, musi zostać wymieniony przez producenta, przedstawiciela serwisowego lub wykwalifikowaną osobę w celu uniknięcia zagrożenia.
- Przed czyszczeniem lub konserwacją urządzenia wyjmij wtyczkę z gniazdka.
- Utrzymuj dysze i filtry w czystości wtedy odkurzacz będzie działał lepiej i bezpieczniej.
- Nie używaj odkurzacza do zasysania wody.
- Nie zostawiaj odkurzacza na deszczu.
- Nie zanurzaj urządzenia w wodzie podczas czyszczenia.
- Nie używaj odkurzacza do odkurzania łatwopalnych, wybuchowych, żrących cieczy lub przedmiotów, gorącego i palącego się pyłu lub materiałów szkodliwych dla ludzkiego ciała.
- Upewnij się, że temperatura popiołu nie przekracza 50°C.
- Używaj tylko akcesoriów zalecanych przez producenta.
- Odkurzacz przechowuj w suchym pomieszczeniu.
- To urządzenie nie jest przeznaczone do użytku przez osoby (w tym dzieci) o ograniczonych zdolnościach fizycznych, sensorycznych lub umysłowych lub bez doświadczenia i wiedzy, chyba że będą one nadzorowane i zostaną poinstruowane jak użytkować urządzenie przez osobę odpowiedzialną za ich bezpieczeństwo.
- Pilnuj, aby dzieci nie bawiły się urządzeniem.
- Nie używaj urządzenia, jeśli filtr nie jest zainstalowany! Nie używaj innych filtrów oprócz tych (przeciwpożarowych) dołączonych do urządzenia przez producenta.

Budowa i nazwa części

1. Uchwyt
2. Przełącznik
3. Podłączenie węża / ssawka
4. Zbiornik S/S
5. Wąż metalowy
6. Zintegrowana podstawa
7. Uniwersalne kółko
8. Rura aluminiowa
9. Metalowe zapięcie
10. Metalowa pokrywa zbiornika
11. Pokrywa górna
12. Funkcja samooczyszczania
13. Funkcja wydmuchu
14. Przełącznik filtra
15. Obudowa silnika
16. Wlot powietrza do silnika (metalowy)
17. Śruba do filtra HEPA
18. Zmywalny filtr HEPA

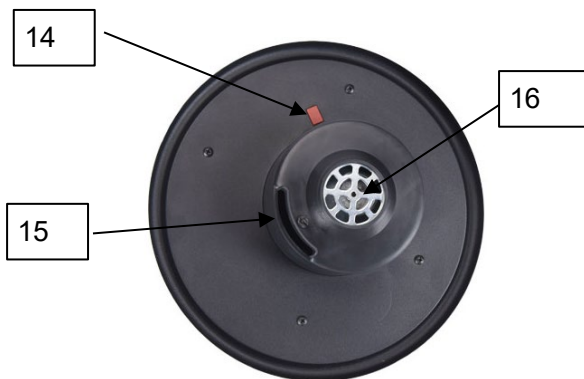

Instrukcja użytkowania

- Zamontuj filtr na dnie pokrywy pojemnika
- Każdorazowo po długim użytkowaniu filtr powinien być wyjęty i wyczyszczony.
- Podłącz szczelnie wąż z pojemnikiem i aluminiową rurką, tak jak na powyższym zdjęciu konstrukcyjnym.
- Włóż rurę do kominka lub pieca, aby odkurzyć popiół.
- Podłącz wtyczkę do gniazdka.
- Włączanie: ustaw przełącznik (2) w pozycji "I".
- Wyłączanie: ustaw przełącznik w pozycji "O".
- Przesuwaj rurę ssącą z lekkim naciskiem powoli i równomiernie po zabrudzeniach.
- Zdemontuj filtr jak na poniższym zdjęciu i przekręć śrubę zgodnie z ruchem wskazówek zegara.

UWAGA

Gumowa część filtra musi ściśle dotykać czerwonego przełącznika filtra. Dokręć filtr za pomocą śruby na spodzie, w przeciwnym razie odkurzacz do popiołu nie rozpocznie pracy.



Jeżeli filtr HEPA jest zablokowany (brak mocy ssania lub niska wydajność pracy), naciśnij 5 razy przełącznik wstrząsania kurzu na górnej pokrywie (12), tak jak pokazano na poniższym rysunku.





Konserwacja i pielęgnacja

- Wyłącz urządzenie.
- Odłącz wtyczkę sieciową od zasilania.
- Rozłącz wąż, rurę i pojemnik.
- Oczyszczyć wąż i rurę, nie dopuszczaj do ich zablokowania.
- Wyczyść części z tworzywa sztucznego wilgotną ściereczką.
- Do czyszczenia nie używaj środków czyszczących, rozpuszczalników ani ostrych przedmiotów.
- Opróżnij zbiornik, usuń osady, w razie potrzeby umyj.
- Usuń kurz z filtra przeciwpożarowego i w razie potrzeby umyj go.

Naprawy

Używaj wyłącznie akcesoriów i części zamiennych zalecanych przez producenta. Jeżeli odkurzacz ulegnie awarii, zleć naprawę tylko uprawnionemu elektrykowi.

Prawidłowa utylizacja produktu

 	<p>Oznaczenie umieszczone na produkcie wskazuje, że produktu po upływie okresu użytkowania nie należy usuwać z innymi odpadami pochodzącymi z gospodarstw domowych. Aby uniknąć szkodliwego wpływu na środowisko naturalne i zdrowie ludzi wskutek niekontrolowanego usuwania odpadów, zużyte urządzenie należy dostarczyć do punktu odbioru zużytego sprzętu AGD. W celu uzyskania szczegółowych informacji na temat miejsca i sposobu bezpiecznego usuwania odpadów elektrycznych i elektronicznych, użytkownik powinien skontaktować się z punktem sprzedaży detalicznej, lub z lokalnym Wydziałem Ochrony Środowiska. Produktu nie należy usuwać razem z innymi odpadami komunalnymi.</p>
--	---

Informacje o gwarancji

Producent udziela gwarancji zgodnie z obowiązującymi przepisami na terenie RP, na okres 2 lat licząc od daty sprzedaży urządzenia użytkownikowi końcowemu.

Gwarancja obejmuje tylko wady materiałowe i produkcyjne.

Przy zgłaszaniu roszczeń z tytułu gwarancji należy przedłożyć oryginalny dowód zakupu.

Naprawy w ramach gwarancji mogą być wykonywane wyłącznie przez autoryzowany serwis.

Gwarancja nie ma zastosowania w przypadku:

Normalnego zużycia i uszkodzeń mechanicznych.

Niewłaściwego użytkowania, np. przeciążenia urządzenia, stosowania niezatwierdzonych akcesoriów

Użycia siły, uszkodzeń spowodowanych czynnikami zewnętrznymi

Uszkodzeń spowodowanych nieprzestrzeganiem instrukcji obsługi, np. podłączenie do nieodpowiedniej sieci zasilającej lub nieprzestrzeganie instrukcji montażu.

Częściowym lub całkowitym demontażem urządzenia przez nieuprawnione osoby.

NERGIS Sp.z.o.o.Sp.k.

ul.Ludowa 17 lok.U1

00-780 Warszawa

www.nergis.pl

2022

ENGLISH

Before operating this appliance, please ensure that you read & understand all the instructions that apply to it, as failure to comply with these instructions may result in personal injury to other person, and also increase the risk of fire or electrical shock. Please ensure that any replacement parts or accessories used with this appliance are correctly and/or securely fitted before use.

Please retain the instructions for constant reference.

ATTENTION!!

The equipment complies with the safety regulations required for electrical equipment. Read through the instructions for use before starting up the equipment.

Improper use can lead to personal injury and property damage. Users who are not familiar with the instructions, may not operate the equipment. Keep the instructions for use in safe custody.

Children and youths are not permitted to operate the equipment.

Safety Information

- Do not leave the cleaner running without supervision.
- The mains voltage must be the same as the details on the machine's model plate.
- Do not carry the cleaning by the cable. Only remove the cable from the socket by pulling the plug. Protect the cable from oil, heat and sharp edges. Damaged cables can cause an electric shock.
- Ensure that the cable is not damaged by being run over, crushed, torn, etc.
- The plug must be removed before cleaning or maintaining the appliance.
- Keep the nozzles and filters clean and functional to ensure that the cleaner works better and more safely.
- Do not use to suck up water.
- Do not leave the cleaner out in the rain.
- Do not immerse in water for cleaning.
- Do not use the cleaner to vacuum inflammable or explosive liquids, causticity object, hot and burning dust or harmful material to human body.
- Ensure the temperature of the ash cannot exceed Celsius 50 °C.
- Only use the accessories recommended by the manufacturer.
- Keep the cleaner in a dry room.
- Don't vacuum the objects as follows: liquid, inflammable and explosive dangerous material, corrosive material and burning ash, match, and cigarette.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance if the filter is not installed! Do not use other filters except the ones (fire prevention filter) attached to the appliance by manufacturer.

maestro.

Structure and parts name

1. Handle
2. Switch
3. Suction mouth
4. S/S tank
5. Metal hose
6. Integrated base
7. Universal wheel
8. Aluminum tube
9. Metal clip
10. Metal barrel cap
11. Top cover
12. Dust shaking button
13. Blower
14. Filter switch
15. Motor base
16. Motor air inlet (metal)
17. Screw for HEPA filter
18. Washable HEPA filter



Use instruction

- Fit the HEPA filter on the bottom of container cover, and the filter should be took out and cleaned after lengthy use.
- Connect tightly hose with the barrel and aluminum tube as the above structure picture shows.
- Put tube into fireplace or stove to vacuum ash.
- Connect the plug to the socket
- Switching on: set the switch (2) to "I"
- Switching off: set the switch to "O"
- Move the suction tube with light pressure slowly and evenly over the dirt.
- Assemble the HEPA filter as the following picture shows, and turn of the screw as the signal.

maestro.

Attention!!

The rubber part of HEPA filter need to touch the red filter switch tightly with the screw on bottom, otherwise the ash cleaner cannot start to work.



Press the dust shaking switch on top cover 5 times as the following picture shows if the HEPA filter blocked (no suction power or low working efficiency).




Maintenance and care

- Stop the cleaner.
- Disconnect the mains plug from the power supply.
- Disconnect hose, tube and container apart.
- Clean the hose and tube and keep them unblocked.
- Use a damp cloth to clean the plastic parts.
- Empty container, tap the deposits to loosen them and, if necessary, wash it.
- Brush dust on fire prevention filter and, if necessary, wash it.
- Do not use cleaning products, solvents or sharp objects for this purpose.

Repairs

Only use accessories and spare parts recommended by the manufacturer. If the equipment should fail some day in spite of our quality controls and your maintenance, only have it repaired by an authorized electrician.

Correct Disposal of this product

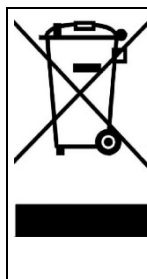

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warranty Information

The manufacturer provides warranty with a 2 years, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

Normal wear and tear

Incorrect use, e.g. overloading of the appliance, use of non-approved accessories

Use of force, damage caused by external influences

Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions

Partially or completely dismantled appliances

NERGIS Sp.z.o.o.Sp.k.
ul.Ludowa 17 lok.U1
00-780 Warszawa
www.nergis.pl
2022